


Kesme / Cutting


1. Testere bıçağı karbürü kullanın.

1. Use the saw blade carbide.

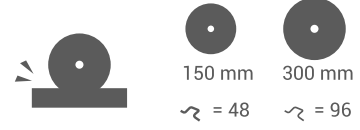


2. Testere ayarı ince kesim olmalıdır.

2. The saw settings must be fine cuts.

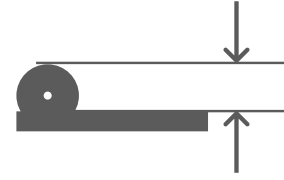

3. Köşelerde yaklaşık Ø9 çapa yuvarlatılmış kesikler.

3. Cut-outs at corners rounded to approximately Ø9.

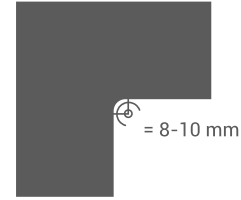

4. Kenarlar ihtiyaç duyulması halinde, zımpara kağıdı ya da törpü yardımıyla çapak alma işlemine tabi tutulabilir.

4. The edges can advantageously be deburred with sandpaper or a file.



5. Zımpara kağıdı 100 kumluk olmalıdır.

5. Grit Abrasive Paper 100

Önemli Not – Kullanım Hakkında Please Note – About Handling

1. Kullanım ve işlem sırasında koruyucu eldiven ve gözlük kullanılması tavsiye edilir.

2. İşlem öncesinde ya da sırasında, dış cephe panellerinin yüzeylerinden koruyucu film tabakasını çıkarmayın. Dış cephe panellerinin her iki tarafındaki koruyucu filmi aynı anda çıkarın.

3. Panelleri düz yukarı kaldırın ve plakaları birbirine doğru çekmeyin.

4. Dış cephe panelleri, kullanılacağı zaman nakledilmelidir.

1. It is recommended to wear protective gloves and goggles while handling and processing.

2. Do not remove the protective film from the facade panels' surfaces before or during the processing. Remove the protective film on both sides of the facade panels simultaneously.

3. Lift the panels straight up and do not haul the plates against each other.

4. Panels should be transported, when they are used.